

COGNEX

DataMan[®] 8600

Reference Manual



2020 April 14
Revision: 6.1.6.4

Legal Notices

The software described in this document is furnished under license, and may be used or copied only in accordance with the terms of such license and with the inclusion of the copyright notice shown on this page. Neither the software, this document, nor any copies thereof may be provided to, or otherwise made available to, anyone other than the licensee. Title to, and ownership of, this software remains with Cognex Corporation or its licensor. Cognex Corporation assumes no responsibility for the use or reliability of its software on equipment that is not supplied by Cognex Corporation. Cognex Corporation makes no warranties, either express or implied, regarding the described software, its merchantability, non-infringement or its fitness for any particular purpose.

The information in this document is subject to change without notice and should not be construed as a commitment by Cognex Corporation. Cognex Corporation is not responsible for any errors that may be present in either this document or the associated software.

Companies, names, and data used in examples herein are fictitious unless otherwise noted. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, nor transferred to any other media or language without the written permission of Cognex Corporation.

Copyright © 2019. Cognex Corporation. All Rights Reserved.

Portions of the hardware and software provided by Cognex may be covered by one or more U.S. and foreign patents, as well as pending U.S. and foreign patents listed on the Cognex web site at: cognex.com/patents.

The following are registered trademarks of Cognex Corporation:

Cognex, 2DMAX, Advantage, AlignPlus, Assemblyplus, Check it with Checker, Checker, Cognex Vision for Industry, Cognex VSOC, CVL, DataMan, DisplayInspect, DVT, EasyBuilder, Hotbars, IDMax, In-Sight, Laser Killer, MVS-8000, OmniView, PatFind, PatFlex, PatInspect, PatMax, PatQuick, SensorView, SmartView, SmartAdvisor, SmartLearn, UltraLight, Vision Solutions, VisionPro, VisionView

The following are trademarks of Cognex Corporation:

The Cognex logo, 1DMax, 3D-Locate, 3DMax, BGAll, CheckPoint, Cognex VSoC, CVC-1000, FFD, iLearn, In-Sight (design insignia with cross-hairs), In-Sight 2000, InspectEdge, Inspection Designer, MVS, NotchMax, OCRMax, PatMax RedLine, ProofRead, SmartSync, ProfilePlus, SmartDisplay, SmartSystem, SMD4, VisiFlex, Xpand

Portions copyright © Microsoft Corporation. All rights reserved.

Portions copyright © MadCap Software, Inc. All rights reserved.

Other product and company trademarks identified herein are the trademarks of their respective owners.


Table of Contents


| | |
|--|-----------|
| Legal Notices | 2 |
| Table of Contents | 3 |
| Symbols | 5 |
| Getting Started | 6 |
| About DataMan 8600 | 6 |
| DataMan 8600 Accessories | 7 |
| DataMan 8600 Reader Cables | 8 |
| DataMan 8000 Series Base Station Cables | 8 |
| Physical Layout of the Reader | 9 |
| Physical Layout of the Base Station | 10 |
| DMA-IBASE-01 | 10 |
| DMA-IBASE-BT-XX | 10 |
| Setting Up Your DataMan 8600 | 12 |
| Overview of Setting Up the Reader | 12 |
| Install the DataMan SetupTool | 12 |
| DataMan 8600 Specifications | 13 |
| DataMan 8600 Imager Specifications | 14 |
| DataMan Base Station Specifications | 14 |
| LED Wavelengths | 14 |
| Connection Options | 15 |
| Connecting a DataMan 8600 Through Ethernet | 15 |
| Troubleshooting an Ethernet Connection | 16 |
| Connecting a DataMan 8600 Through RS-232 | 16 |
| Connecting a DataMan 8600 Through USB | 18 |
| Using Your Device Through USB | 18 |
| Using DataMan 8600 Wireless Reader | 20 |
| Connecting to a Wireless DataMan 8600 Through a Base Station | 20 |
| Pairing Strategy (DMA-IBASE-BT-XX) | 22 |
| Base Station Routing Capabilities | 24 |
| Ad-hoc Mode | 24 |
| Infrastructure Mode | 25 |
| Wireless Reader: Buffering Data | 25 |
| Summary of Wireless Buffering Indicators | 27 |
| Wireless Reader: Charging | 28 |
| Wireless Reader: Changing Batteries | 30 |
| Reading Codes with the DataMan 8600 | 33 |
| Industrial Protocols | 33 |
| Trigger Types | 34 |
| Field of View and Reading Distances | 34 |
| Cleaning/Maintenance | 35 |
| Cleaning the Reader Housing | 35 |
| Cleaning the Reader Lens Cover | 35 |
| Compliance Information, Warnings and Notices | 36 |


| | |
|---|-----------|
| Laser Information | 36 |
| Regulations/Conformity | 36 |
| Compliance Statements: DataMan Base Station | 38 |
| 中国大陆 RoHS (Information for China RoHS Compliance) | 40 |
| Reader Control Codes | 41 |
| Keyboard Language (Corded Readers Only) | 41 |
| Precautions | 42 |


Symbols

The following symbols indicate safety precautions and supplemental information:

 **WARNING:** This symbol indicates a hazard that could cause death, serious personal injury or electrical shock.

 **CAUTION:** This symbol indicates a hazard that could result in property damage.

 **Note:** This symbol indicates additional information about a subject.

 **Tip:** This symbol indicates suggestions and shortcuts that might not otherwise be apparent.

Getting Started

About DataMan 8600



The DataMan 8600 readers offer the industry's most advanced technology for reading 1D and 2D codes regardless of size, quality, printing method or surface, and belong to the only industrial handheld ID reader family that offers Industrial Ethernet communication. DataMan 8600 is available with patented 1DMax+ with Hotbars, class-leading 2-D algorithms and future-proof modular communication slide-ins.

The DataMan 8600 readers use Cognex's patented UltraLight® technology and 2DMax+ algorithms to read the most challenging Direct Part Mark barcodes. UltraLight® illumination provides flexible lighting control to create dark field, bright field and diffuse lighting. Additionally, DataMan 8600 features a tuning button for easy configuration and extended read attempts.

The DataMan 8600 readers are available with the following communication options:


- Ethernet
- USB
- RS-232
- Bluetooth
- WiFi

An intelligent base station is also provided when the DataMan 8600 reader uses the wireless (Bluetooth or WiFi) communication module. The base station acts as a router between the reader and your computer or network. Infrastructure Mode does not use the base station for communication. (See [Infrastructure Mode](#).)






Note: Henceforward, the term 'wireless' refers in this document to the WiFi or to the Bluetooth communication module of the reader.

The DataMan 8000 series base stations are available with the following communication options:

|  | Base Station Communication | | | Wireless Protocol | |
|---|------------------------------------|-----|--------|-------------------|------|
| | Ethernet with Industrial Protocols | USB | RS-232 | Bluetooth | WiFi |
| DMA-CBASE-01 | | √ | | | |
| DMA-IBASE-BT-01 | | √ | √ | √ | |
| DMA-IBASE-BT-02 | √ | √ | √ | √ | |
| DMA-IBASE-01 | √ | √ | √ | | √ |




 
 
DataMan 8600 Accessories

| | | |
|------------------------------------|------------------|---|
| Serial/USB slide-in | DMCM-SERIALM-00 |  |
| Ethernet slide-in | DMCM-ENETM-00 | |
| Bluetooth slide-in | DMCM-BTM-00 | |
| Wireless slide-in | DMCM-WLESSM-00 | |
| Charging Base Station | DMA-CBASE-01 |  |
| Intelligent Base Station | DMA-IBASE-01 | |
| Intelligent Bluetooth Base Station | DMA-IBASE-BT-01 | |
| Intelligent Bluetooth Base Station | DMA-IBASE-BT-02 |  |
| Power Supply for base station | DMA-24VPWR-xx* | |
| Power Supply for reader | DM100-PWR-000 |  |
| Battery for the wireless reader | DMA-HHBATTERY-01 | |
| Multi-Battery Charger | DMA-MBC-xx* |  |
| POE Adapter | CPS-24V-POE1 |  |
| POE Adapter | CPS-24V-POE4 |  |
| POE Adapter | CPS-AC-POE1A-xx* |  |
| Wall Mount | DMA-WALL-8000-00 |  |

| | | |
|-----------------------------|-------------------|---|
| Wall Mount for Base Station | DMA-IBASE-WALL-00 |  |
| Stand | DM-STAND-00 |  |
| Rubber sleeve | DM8600-SLEEVE-00 |  |



*XX can be US, EN, UK, or JP

DataMan 8600 Reader Cables

| | | |
|---|--------------------|---|
| RS-232 coiled cable for reader, 2.5 m | DM8000-RS232-02 |  |
| RS-232 industrial cable for reader, 2.5 m | DM8000-RS232IND-02 | |
| RS-232 coiled cable for reader, 4 m | DM8000-RS232-05 | |
| USB cable, 2.5 m | DM8500-USB-00 |  |
| USB coiled cable, 2.5 m | DM8500-USBC-02 |  |
| Ethernet Coiled cable, 5m | DM8000-ECABLEC-05* |  |
| Ethernet cable, 2.5 m | DM8000-ECABLE-02 |  |
| Ethernet cable, 5 m | DM8000-ECABLE-05 | |
| Ethernet cable, 30 m | DM8000-ECABLE-30 | |


*Collimated cable length including DM8000-ECABLE-X should not exceed 50 m.

 DataMan 8000 Series Base Station Cables

| | | |
|--|----------------|---|
| RJ25 (RJ12) to DSUB9 cable for base station, 5 m | DMA-RS232RJ-05 |  |
| Straight 10ft USB cable | DMA-USB-00 |  |

- USB cable for base station: Use any standard USB-A to USB-B 2.0 cable up to 3 meters.
- Ethernet cable for base station: Use any standard CAT5/5e, SF/FTP or S/FTP cable.

Physical Layout of the Reader

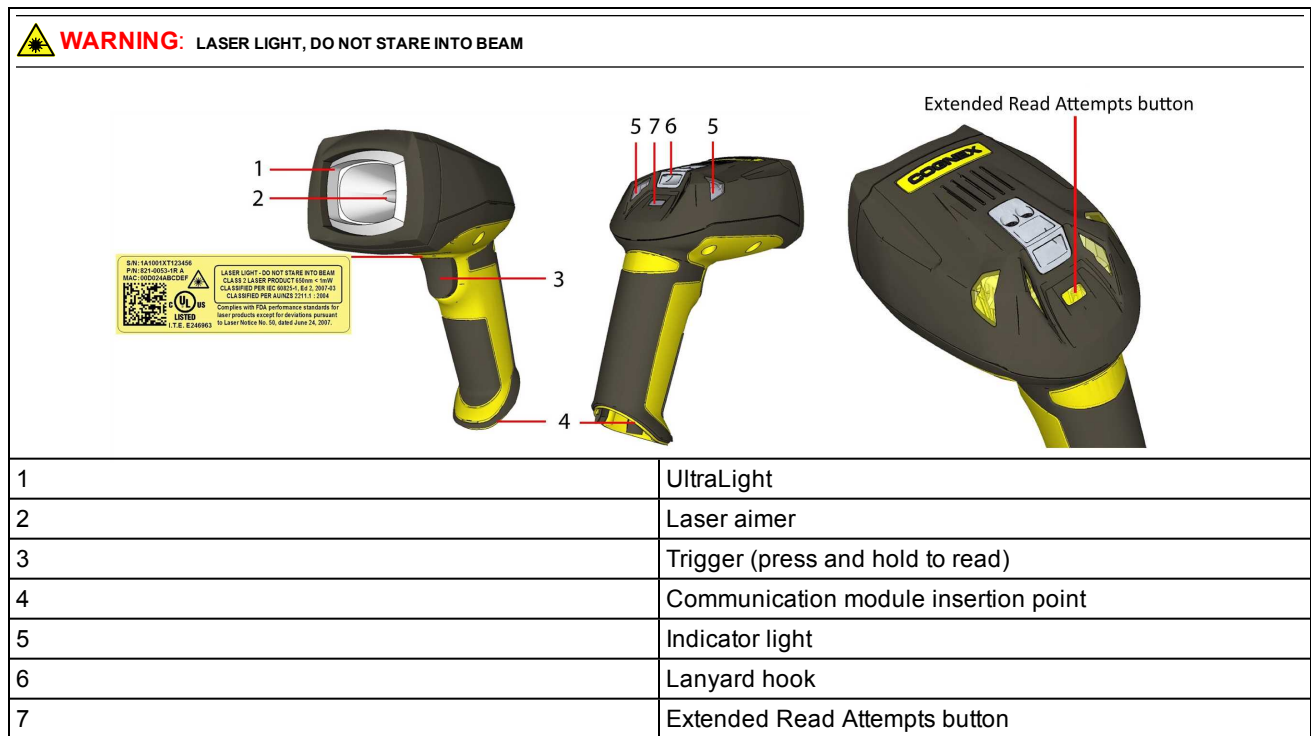

By default, the **Extended Read Attempts** button of the DataMan 8600 is used for **Tuning Optimization**. Tuning Optimization automatically picks the best Read Setup for the current decode and sets it as Read Setup 4 in the DataMan **Setup Tool**, locking in Symbology, Exposure, Lighting Settings, Focus, etc. This provides snappier reading for use cases where the same type of code is read repeatedly. To execute Tuning Optimization, press and hold the Extended Read Attempts button until a yellow/green light flashes, then let go of the button. The lights continue to flash until a code is read. When the trigger is pressed to read a code, the lights cycle, performing a burst trigger through the enabled Read Setups, then the flashing stops. A beep and solid green light signifies that tuning is over and the reader is optimized. You can undo tuning by holding the Extended Read Attempts button again until the indicator turns red.

Alternative reading options that are utilized by the Extended Read Attempts button can be selected under **System Settings/TUNE Button** from the following:

- **Set Match String:** After arming the device (by holding the Extended Read Attempts button) with the optical button, the next trigger sets the read code as a Match String (feature key required for Match Strings to be available).
- **Enable verifier:** After arming the device (by holding the Extended Read Attempts button), triggering enables verification on on the read code (feature key required for verification to be available).

To disable the Extended Read Attempts button, use Disable Reader Button under System **Settings/TUNE Button** in Setup Tool.

Physical Layout of the Base Station

DMA-IBASE-01

| | |
|---|---|
| 1 | Base station status indicators |
| 2 | Spare battery charger |
| 3 | Spare battery charger status indicator |
| 4 | Connection point with the reader: <ul style="list-style-type: none"> • pairing reader and base station • non-wireless communication • charging |
| 5 | RS-232 |
| 6 | USB |
| 7 | Power plug (24V, max. 13W) |
| 8 | Ethernet (with optional Class 3 PoE power) |

DMA-IBASE-BT-XX

| | |
|---|--------------------------------|
| 1 | Base station status indicators |
|---|--------------------------------|

| | |
|---|---|
| 2 | Connection point with the reader: <ul style="list-style-type: none"> • pairing reader and base station • non-wireless communication • charging |
| 3 | RS-232 |
| 4 | USB |
| 5 | Power plug (24V, max. 15W) |
| 6 | Alternative power supply connector (24V, max. 15W, polarity marked on the plastic part near the connector) Recommended wire diameter is 14-18 AWG |
| 7 | Ethernet |

Base station status indicators:

- Power: RED = base powered / BLINK = wrong reader in base
- Communication: BLUE = Wireless link / BLINK = Wireless communication
- Cradle connections: GREEN = reader properly inserted / BLINK = cradle USB interface communication

Note:


- DMA-IBASE-BT-01 does not support Ethernet
- DMA-IBASE-BT-02 supports Ethernet

Setting Up Your DataMan 8600

Overview of Setting Up the Reader

To be able to connect to your reader or base station on your computer, you must perform the following steps:

1. [Install the DataMan Setup Tool](#) on your computer.

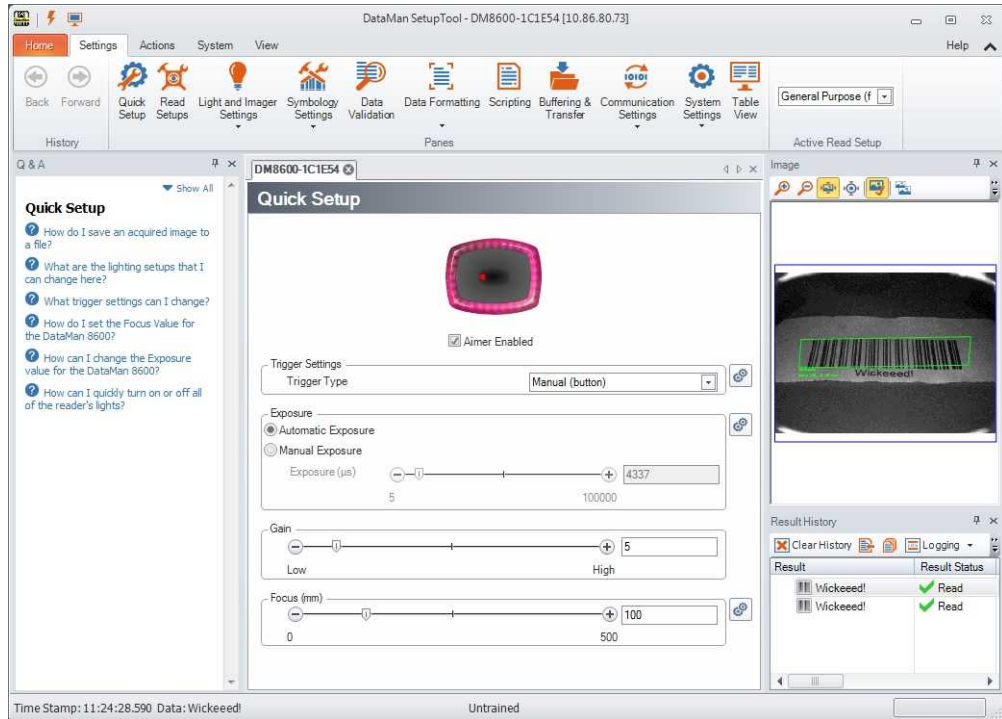


2. Select the connection type: Ethernet, RS-232 Serial, or USB; and connect the appropriate cabling.



Ethernet



RS-232

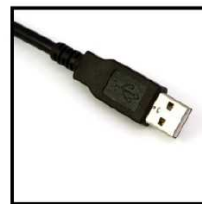

USB

3. Power on your device(s).

Install the DataMan SetupTool

1. Check the DataMan **Release Notes** for a full list of system requirements.
2. Download the DataMan Setup Tool from <http://www.cognex.com/support/dataman> and follow the on-screen steps.
3. Connect the DataMan 8600 to your PC.
4. Launch the DataMan Setup Tool and click **Refresh**. The reader or the base station appears under **COM ports** or **Network devices**.

5. Select a **COM port** or a **Network device** and click **Connect**.



DataMan 8600 Specifications

| | |
|---|--|
| Weight | 303 g (without slide-in), 345 g (with tethered slide-in) |
| Operating Temperature | 0°C — 45°C (32°F — 113°F) |
| Storage Temperature | DataMan 8600 wireless: -10°C — 45°C (14°F — 113°F), DataMan 8600 tethered: -40°C — 60°C (-40°F — 140°F) |
| Maximum Humidity | < 95% (non-condensing) |
| Environmental | IP65 |
| Codes | 1-D barcodes: Codabar, Code 39, Code 128, and Code 93, Interleaved 2 of 5, Pharma, GS1 DataBar, Postal, UPC/EAN/JAN, DataBar 2-D barcodes: Data Matrix™, QR Code and microQR Code, RSS/CS, PDF 417, MicroPDF 417 |
| Power Supply Requirements | USB: external 5.0 W maximum LPS or NEC class 2 power supply: +5V - +6V DC RS232 external 5.0W max LPS or NEC class 2 power supply +6.0V 1A DC (5.0m RS-232 cable) +6.0V 1A DC (2.5m RS-232 cable) ETH: Class 2 PoE supply IEEE 802.3af (connect only to PoE networks without routing to the outside plant) |
| Inrush current peak | 5A maximum Duration: approx. 30µs Electrical charge: 60µAs at 6V |
| Battery life for wireless reader (typical use case) | ca. 2900 triggers can be operated within a 10 hour working shift |
| Ethernet | 10/100 Base-T FULL/HALF DUPLEX, IEEE 802.3 |
| Bluetooth | Bluetooth™ 2.1, 2.4 GHz |
| WiFi | 802.11 b/g, 2.4 GHz, User Selectable channels 1-11 |

DataMan 8600 Imager Specifications

| Specification | DataMan 8600 Imager |
|---------------------------|---------------------------------|
| Image Sensor | 1/1.8 inch CMOS |
| Image Sensor Properties | 5.3 μm square pixels |
| Image Resolution (Pixels) | 1280 x 1024 |

DataMan Base Station Specifications

| | DMA-IBASE-BT-XX | DMA-IBASE-01 |
|---------------------------|--|---|
| Weight | 300 g | 328 g |
| Operating Temperature | 0°C — 45°C (32°F — 113°F) | 0°C — 40°C (32°F — 104°F) |
| Storage Temperature | -40°C — 60°C (-40°F — 140°F) | -40°C — 60°C (-40°F — 140°F) |
| Maximum Humidity | 95% (non-condensing) | 95% (non-condensing) |
| Power Supply Requirements | 24V +/-10%, 15 W maximum LPS or NEC class 2 power supply Recommended wire diameter is 14-18 AWG | 24V +/- 10%, 13 W maximum LPS or NEC class 2 power supply, or PoE class 3 (connect only to PoE networks without routing to the outside plant) |

LED Wavelengths

The following table shows LED types and the related wavelengths:

| LED | λ [nm] |
|-----|----------------|
| RED | 660 |


Connection Options

Connecting a DataMan 8600 Through Ethernet

1. Connect the Ethernet side-in (DMCM-ENETM-00) to your DataMan 8600.



2. With a 2.5 mm Allen wrench, tighten the screws so that the side-in is firmly locked.

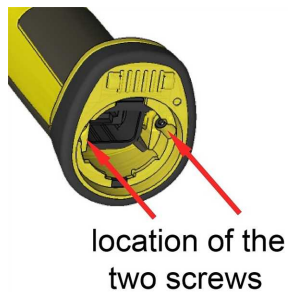

3. Insert the plug and slide the cable lock up to the reader, and twist the cable lock in place.



Use the DM8000-ECABLE-05 (5 meters) or the DM8000-ECABLE-30 (30 meters). You also need a Power Over Ethernet Adapter (CPS-AC-POE1A-xx).

Note: Disconnect the DataMan 8600 reader from power before inserting/removing communication modules.

Troubleshooting an Ethernet Connection

If your reader does not appear in the DataMan Setup Tool's list of detected network devices, you may need to adjust your network settings.

1. First, check your Ethernet connection and click **Refresh** in the DataMan Setup Tool.
2. Next, scan the **Enable DHCP** code below (which you can also find in the *DataMan Reader Configuration Codes* document available from the Windows **Start** menu or the Setup Tool **Help** menu). This might allow the reader to acquire a suitable IP address from a DHCP server on your subnet.

If the reader still does not appear, you can use either the Add Device or Force Network Settings options in the DataMan Setup Tool.

1. If you know the IP address of the reader, use the **Add Network Device** option under **Reader Maintenance**.
2. If you do not know the IP address, use the **Force Network Settings** option. Either method should allow the DataMan 8600 reader to appear in the list of **Network devices** so that you can connect to it through the DataMan Setup Tool and your Ethernet connection.

If none of the above helps, reset your reader to factory defaults by scanning the **Reset Scanner to Factory Defaults** code below.



Enable DHCP




Reset Scanner to
Factory Defaults

Connecting a DataMan 8600 Through RS-232

1. Connect the serial slide-in (DMCM-SERIALM-00) to your DataMan 8600.



2. With a 2.5 mm Allen wrench, tighten the screws so that the slide-in is firmly locked.

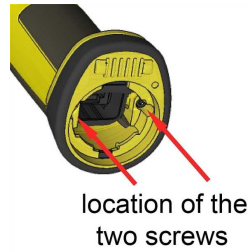


3. Insert the plug and slide the cable lock up to the reader and twist the cable lock in place.



Use the DM8000-RS232-02 cable (2.5 meters) or the DM8000-RS232-05 cable (5 meters). For power supply, use the DataMan 8000 Power Supply (DM100-PWR-000).

Note: Disconnect the DataMan 8600 reader from power before inserting/removing the communication modules.

Observe the following electrical requirements:

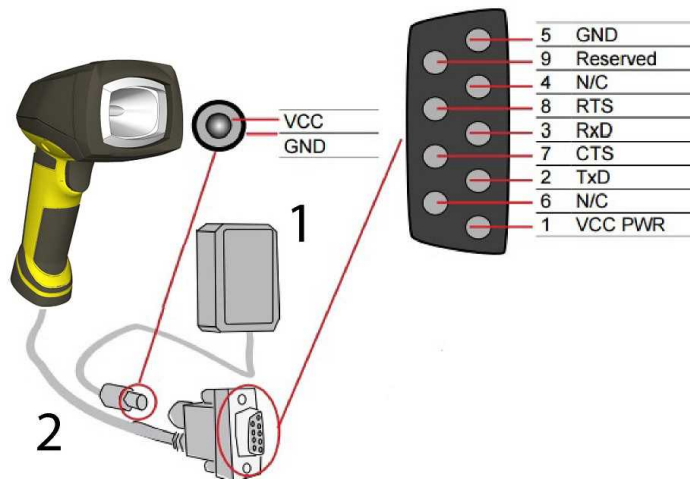

| | |
|---|---|
| 1 | 6VDC power supply (DM100-PWR-000), a 5.5 mm x 2.1 mm DC Power Plug |
| 2 | VCC = +4.75V up to +6.0V for 2.5 m cable VCC = +5.5V up to +6.0V for 5.0 m cable |

WARNING: For proper RS-232 operation, do not apply any voltage to pin 9.


Note: Power on the RS-232 cable can be supplied by either the DC Power Plug or Pin 1 of the D-SUB. **DO NOT** use both in parallel.

Connecting a DataMan 8600 Through USB

1. Connect the serial slide-in (DMCM-SERIALM-00) to your DataMan 8600.



2. With a 2.5 mm Allen wrench, tighten the screws so that the slide-in is firmly locked.

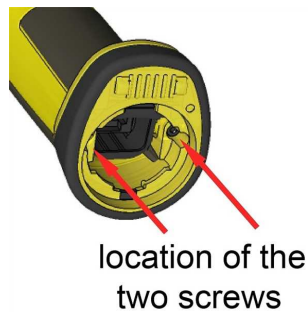

3. Insert the plug, slide the cable lock up to the reader and twist the cable lock in place.




Use the DM8500-USB-00 cable (2.5 meters) or the DM8500-USBC-02 cable (2.5 meters).

Note: Disconnect the DataMan 8600 reader from power before inserting/removing the communication modules.

Using Your Device Through USB

If you connect your reader with the coiled USB cable, you must use your device in USB 1.1 mode. With a straight USB cable, you can use your device in both modes.

Change the **USB Connection** in the **Serial** tab of the **Communication Settings** pane in DataMan Setup Tool, or scan the appropriate code from the **DataMan Configuration Codes** document.

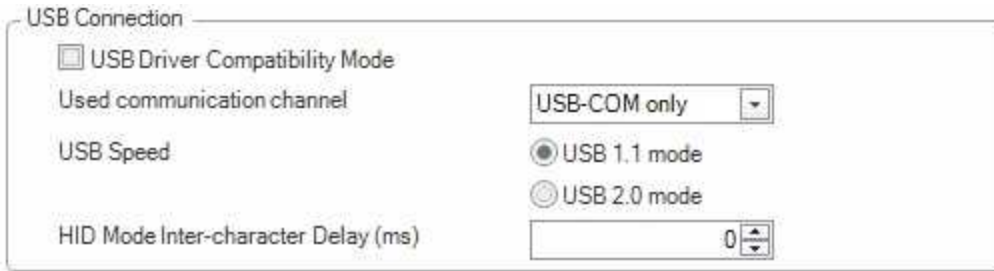

You can also switch the USB mode (CDC or HID) of both the reader and the base station with a pair of RP codes. Perform the following steps:

In the case of a corded reader:



1. Disconnect from the DataMan Setup Tool if you are connected.
2. Scan the “**USB Keyboard**” code from the **DataMan Configuration Codes** document.
3. Start scanning codes with your corded reader.

In the case of a wireless reader:




1. Disconnect from the DataMan Setup Tool if you are connected.
2. Scan the “**Enable USB Keyboard for the base station**” code from the **DataMan Configuration Codes** document.
3. Start scanning codes with your wireless reader.


Using DataMan 8600 Wireless Reader

Connecting to a Wireless DataMan 8600 Through a Base Station


1. Connect the wireless slide-in (DMCM-BTM-00) to your DataMan 8600.

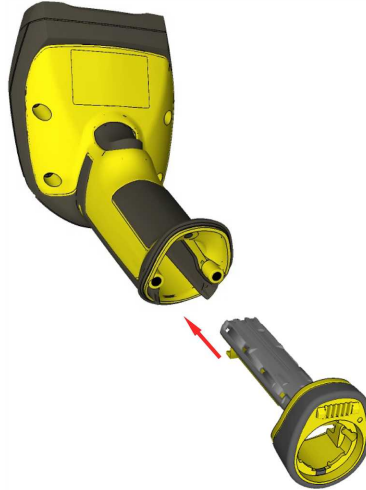

2. With a 2.5 mm Allen wrench, tighten the screws so that the slide-in is firmly locked.

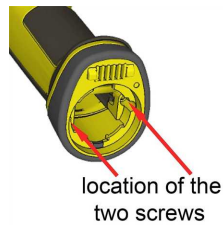

3. Insert the battery.

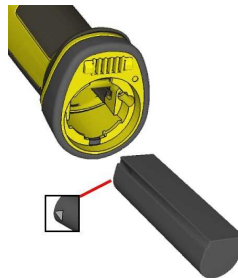

Note: Remove the battery from your DataMan 8600 before inserting/removing the communication module.


- Insert the plug and twist it in place.



- Power up the DMA-IBASE-BT-XX base station using a 24V power supply (DMA-24VPWR-XX). In the case of a DMA-IBASE-01 base station, use either a 24V power supply, or a Class 3 Power Over Ethernet adapter.
- Connect your base station to your PC using either serial, USB or Ethernet communication.

| DMA-IBASE-BT-XX | | DMA-IBASE-01 | |
|-----------------|------------------------------------|--------------|------------------------------------|
| 1 | RS-232 connection | 1 | Power |
| 2 | USB connection | 2 | Alternative power supply connector |
| 3 | Power | 3 | Ethernet connection |
| 4 | Alternative power supply connector | 4 | |
| 5 | Ethernet connection | 5 | |

Observe the following electrical requirements when connecting the base station through RS-232:

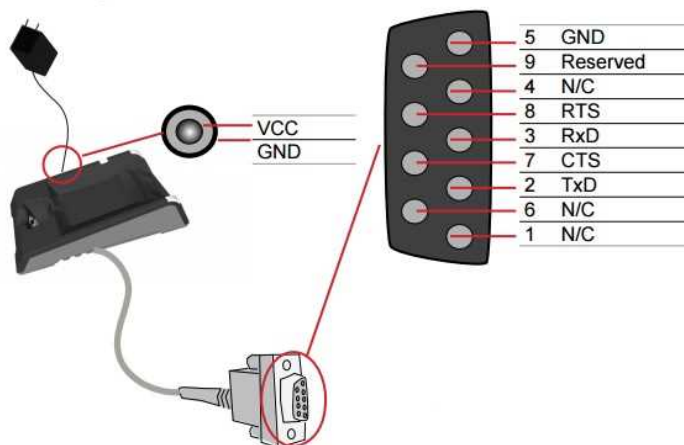

WARNING: For proper RS-232 operation, do not apply any voltage to pin 9.

Power to the base station can be supplied by either the DC power plug or by wiring in 24V. **DO NOT** use both in parallel. The DC power plug is a 24VDC power supply (DMA-24VPWR-xx), 3.5 mm x 1.3 mm.

Note: Be careful to use the appropriate connector for RS-232. See [Step 6](#) above.

7. When the base station is powered up, scan the Pair scan code and place your reader into the base station. The base station's status indicator becomes green. When the wireless reader is removed from the base, a wireless connection is established. The status indicator of both the base station and the reader become blue and you can hear a beep. Blue lights indicate that the reader and the base have successfully paired and are communicating.
8. Connect to your base station or to the wireless reader. You have the following connection options:

| Base Station Connection Type | Connect to Reader in the DataMan Setup Tool | Connection Channels |
|------------------------------|---|--------------------------------|
| RS-232 | Wireless reader appears: COM port (Base Station does not appear) | terminal program Setup Tool |
| USB | Base Station appears: COM port 1 Wireless reader appears: COM port 2 | terminal program Setup Tool |
| Ethernet | Base station appears: Network device 1 Wireless reader appears: Network device 2 | terminal program Setup Tool |


9. Lift your reader up from the base station and start reading codes.

Note:


- When the reader is on the base station, communication is established by means of cradle contacts. Wireless communication is disabled.
- Configure wireless communication settings by connecting to the base station. In order for the changed settings to be synchronized between the DataMan 8600 wireless reader and the base station, place your reader in the base station after your changes are saved. To assign a static IP address to the base station or the reader when communicating via Ethernet, connect to the base station in the DataMan Setup Tool. The base station, however, auto-assigns the IP address to the reader when they become paired.
- When you connect with the base station to a terminal program, your wireless reader sends decode results to the terminal, but you cannot send commands to the reader.
- If you want to unpair your reader from the base station, you can either click Unassign in the Bluetooth or Wireless tab of the *Communication Settings* pane of the DataMan Setup Tool (when you are connected either with the reader or the base station), or scan the "Unassign Reader" reader configuration code.
- If you place the wrong reader (that is, a reader that is not associated with the base station) into the base station, the base station status indicator flashes red and a series of short beeps can be heard.

Pairing Strategy (DMA-IBASE-BT-XX)

In order to pair the base station and the reader in a single step without considering former pairing states and without using the DataMan Setup Tool, scan the Pair sticker from the scan code sticker on the base station. Place the reader in the base station.

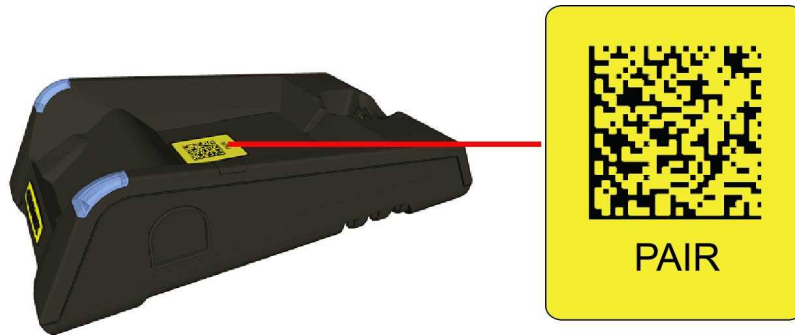

The reader then blinks green/blue until it gets paired with the base station (or until the end of the 20 second timeout period). When the reader is put on the base station, the base station drops its pairing with its old reader and pairs with the new reader.

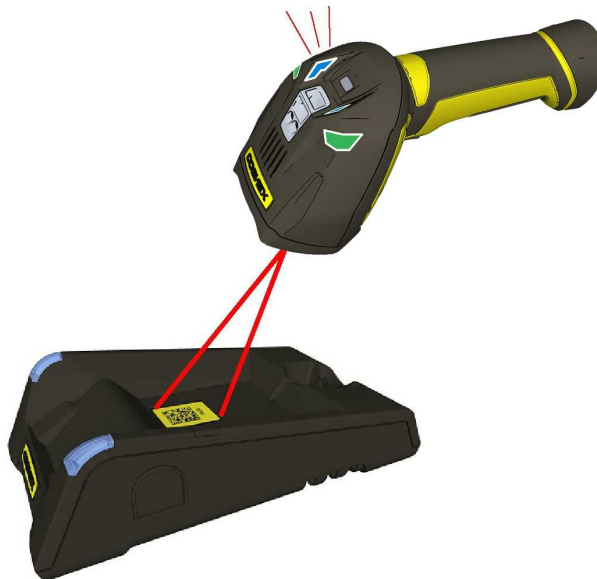

Note: Scanning the Pair code puts the base station and the reader put on it into **force pairing mode**. This means that the reader and the base it is put on get paired regardless of any assignments they both had previously. This force pairing mode is valid for 20 seconds after reading the Pair code.

The base station's indicators turn green to indicate successful pairing:




When the reader is put onto another (unpaired) base station without any previous actions, the base station signals this event with beeping and red flashing of its indicators:



The base station that is paired with a certain reader signals a bad reader alert (beeps and flashing red indicators) also when another, unassigned reader is put into it.

Base Station Routing Capabilities

The base station is visible as connected through either RS-232, USB or Ethernet, but it routes data through the wireless interface to the reader.

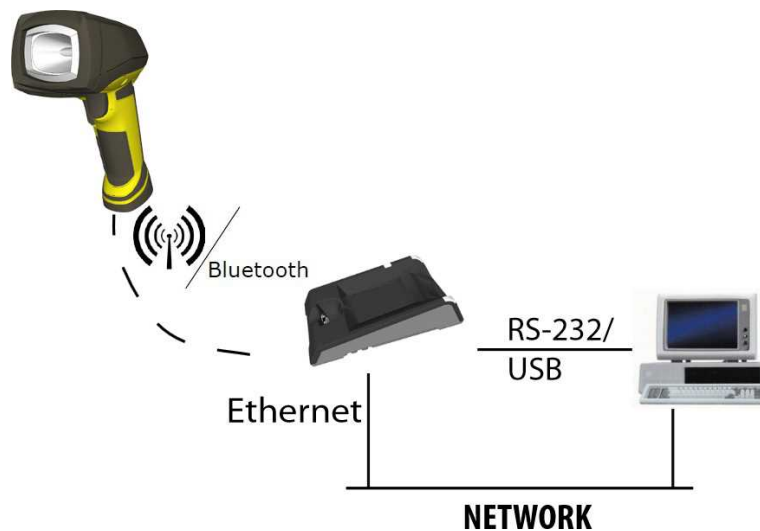

Ad-hoc Mode

It is possible to connect to the reader wirelessly with the computer in ad-hoc mode (using a reader-created WiFi connection). Reset the reader to factory defaults (this configures the device to ad-hoc mode), and after the device appears under WiFi connections, connect to it with the DataMan Setup Tool and then use the **Wireless** tab under **Communication Settings** to configure authentication and encryption (which are not configured by default). For more information, see the **Communications and Programming Guide**.


Note: The base station is only used for charging the reader in this setup. If an intelligent base station is used, the reader has to be unassigned in the DataMan Setup Tool (connected to the base station) under the **Communication Settings > Wireless** tab if the reader has already been placed in the base station.

Note: Placing the reader in the intelligent base station automatically reassigns it to the base station unless the base station is unplugged from the network first.

Ad-hoc Mode



Infrastructure Mode

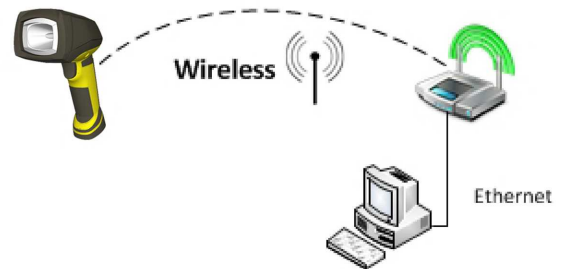

Infrastructure Mode

It is possible to connect to the reader in infrastructure mode using WiFi connection. You need to reset the reader to factory defaults, connect to the device in ad-hoc mode, and then use the **Wireless** tab under **Communication Settings** to activate and configure infrastructure mode.

Infrastructure mode requires a router as an access point. Encryption and authentication are available as seen in the table below. See the **Communications and Programming Guide** for detailed information.

| Authentication mode | Encryption | Requirements |
|---------------------|---------------------|---|
| Open System | WEP-40, WEP-104 | passphrase |
| WPA-PSK, WPA2-PSK | TKIP, AES, TKIP/AES | passphrase |
| EAP-TLS | TKIP, AES, TKIP/AES | - Client's certificate - CA's certificate - Client's private key - Client's username |
| PEAP-MSCHAPV2 | TKIP, AES, TKIP/AES | - Client's certificate - CA's certificate - Client's username |

Note:



- The base station is only used for charging the reader in this setup. If an intelligent base station is used, the reader has to be unassigned in the DataMan Setup Tool (connected to the base station) under the **Communication Settings > Wireless** tab if the reader has already been placed in the base station.
- Placing the reader in the intelligent base station automatically reassigns it to the base station unless the base station is unplugged from the network first.

Wireless Reader: Buffering Data

When you are within the wireless range of the base station, your wireless reader sends decoded data to your PC through the base station, just as if you used a tethered reader. You can also see the decoded images in the DataMan Setup Tool, if it is running and is connected to the reader.

When you leave the wireless range, however, you lose connection to your PC, but you can still keep reading codes. The decoded data is saved in the buffer of the reader.

This buffered data appears on your PC again when you come back within the wireless range, but **ONLY IF** you were connected to a terminal program when you left the wireless range.

Buffered read results on the reader are not displayed in the DataMan Setup Tool; they are only transmitted over an existing keyboard emulation, RS-232 Serial or TCP/IP Telnet connection.

Note: The images acquired by the reader when it is out of the wireless range are never saved, and cannot be retrieved.

Open a connection with the reader in a terminal program so that you gain the buffered data when wireless connection is established again.

See the following table for connection options according to communication type:

| Base Station Connection Type | How to Connect |
|------------------------------|--|
| RS-232 | Connect to the COM port of the base station. |
| USB | Connect to the COM port of the wireless reader. |
| Ethernet | Connect to the terminal program using the IP address of the reader. To find out the IP address, go to the Connect backstage page in the DataMan Setup Tool and check the IP address of the reader in the Address column. |
| USB Keyboard | Open the text editor or your program of choice to use keyboard emulation. When you return to the wireless range, keyboard emulation continues, starting with the buffered data. |

While you are still within the wireless range, the reader occasionally blinks blue to indicate that the wireless connection is established.

When the reader leaves the wireless range, the base station's signal becomes red.



Blinking blue status indicator: wireless connection is alive.



When you leave the wireless range, you can still keep reading codes. The reader going offline is indicated by a long beep and the status indicator flashes magenta. The status indicator blinks magenta: your reader is offline.



When the reader is offline, good reads are indicated with 2 short beeps and the selected good read status indicator color (green by default). The status indicator beeps twice: your reader is offline while decoding symbols.



When the buffer is full, no more codes are read. The reader does not discard the oldest read.
When the buffer is full, the reader beeps and the status indicator becomes white.



Summary of Wireless Buffering Indicators

| Condition | Status Indicator: Reader | Status Indicator: Base Station | Sounds |
|--|--|--|---|
| Reader in wireless range of base station | When the reader is awake, blinking blue indicates wireless connection with the base. When the reader is offline, no indicator. Pull the trigger to wake it up and it will blink blue. Good read: green , single beep (default) No read: red , no beep (default) | Reader out of the base station and reader is awake: steady blue . Reader out of the base station and reader is offline: steady red . Paired reader in the base station: flashing green . Base station is receiving data or images from reader: steady blue . | Good read: 1 beep (default) No read: no beep (default) |


| Condition | Status Indicator: Reader | Status Indicator: Base Station | Sounds |
|--|---|--------------------------------|--|
| Reader out of wireless range of base station | Offline: When the reader wakes up out of the wireless range, there is no indicator. Good read: green (default) No read: red (default) | Reader offline: steady red. | Long beep when you leave the wireless range. Good read: 2 beeps No read: no beep |
| Reader out of wireless range, buffer is full | Good read: green and then white. No read: red (default) | Reader offline: steady red. | Good read: long beep No read: no beep |

Wireless Reader: Charging


When you are reading codes with your wireless reader, blinking red status indicators will indicate a low battery. As the battery discharges, the blink frequency increases. A blinking red status indicator indicates low battery or thermal shutdown mode.



You can also check the status of the battery in the DataMan Setup Tool.

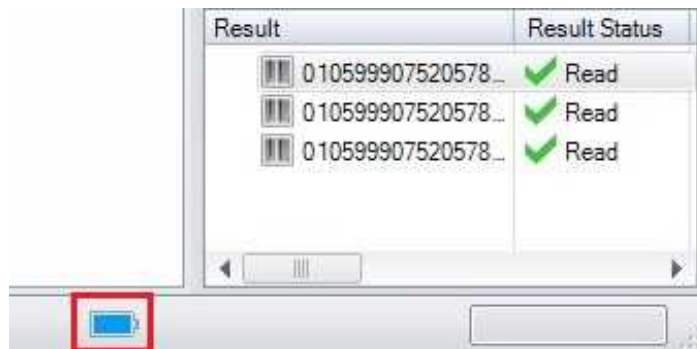

Place the reader on the base station for charging. Make sure that the pins at the end of the handle make contact with the pins in the base station.

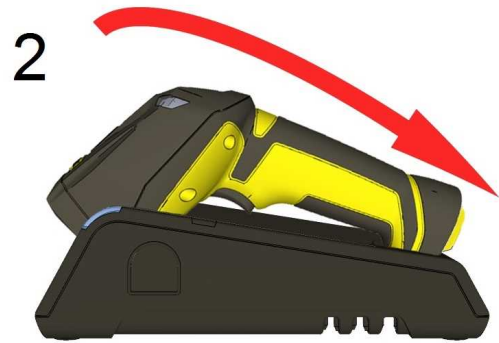

Paired Reader Charging



Paired Reader Fully Charged

Refer to the following table for a summary of indicators regarding charging:

| Condition | Status Indicator: Reader | Status Indicator: Base Station |
|---|--------------------------|---|
| Battery low | flashing red indicators | steady blue, indicating connection flashing blue, indicating data transfer |
| Reader is charging in the base station | steady red indicators | steady green, indicating connection flashing green, indicating data transfer |
| Reader is fully charged in the base station | steady green indicators | steady green, indicating connection flashing green, indicating data transfer |

Wireless Reader: Changing Batteries

To change batteries, perform the following steps:

1. Twist the reader's end cap, and take it off.




2. Hold the reader in an upright position and the battery will slide out of the handle.

Note: You may need to shake the reader slightly.




CAUTION: The battery used in these devices may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60°C (140°F), or incinerate. Replace battery with Cognex DMA-HHBATTERY-01 only. The use of another battery may present a risk of fire or explosion.

3. Put the replacement battery into the slot. The battery has a small triangle on one side. Make sure that you insert the battery in a way that the triangle end goes into the slot first.

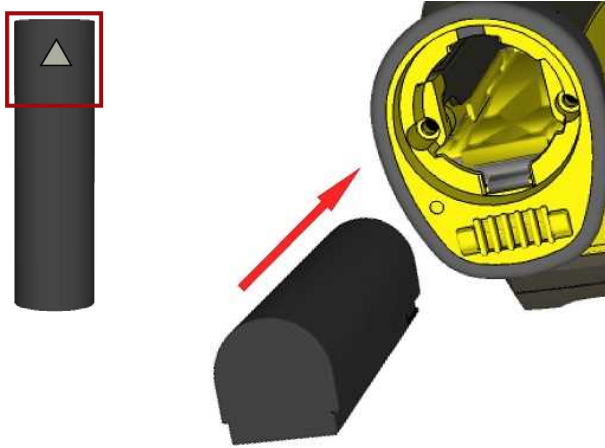


- Put the end cap back on and twist it. Make sure that the triangle aligns with the circle when the cover is locked.

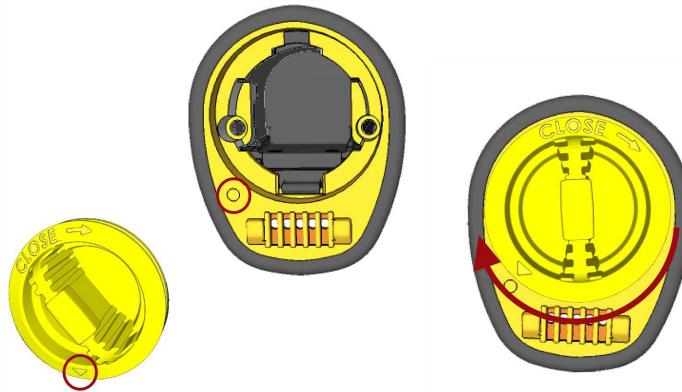

- If using DMA-CBASE-01, place the battery in the spare battery charger in the direction of the small triangle of the battery.



When you are charging the auxiliary battery, the base station's spare battery status indicator displays either charging in progress (red) or fully charged (green).

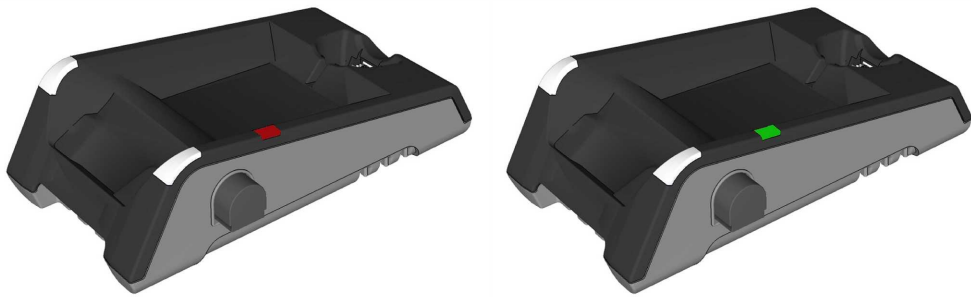

6. Dispose of used battery promptly. Keep it away from children. Do not disassemble and do not burn it. Use the appropriate separate take-back systems for battery disposal.


Reading Codes with the DataMan 8600

Industrial Protocols

The DataMan 8600 readers support the following industrial protocols:

- EtherNet/IP™
- PROFINET
- MC Protocol
- Modbus TCP

Select the industrial protocol tools and sample programs when installing the DataMan Setup Tool.

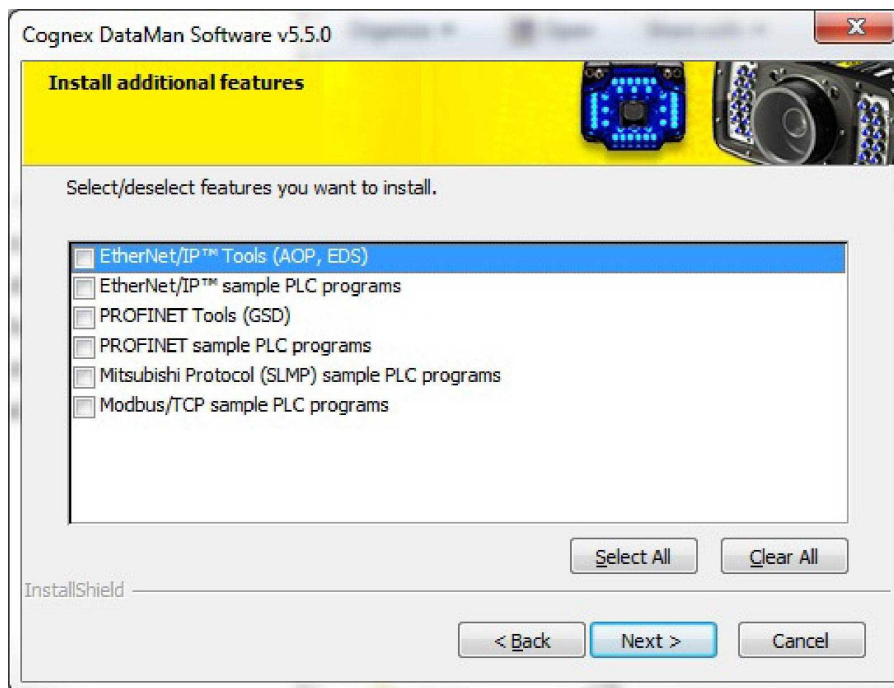

There are three ways to enable or disable Industrial Protocols. Using either method, a reboot is required for the changes to come into effect.

- Enable the protocols using the **Industrial Protocols** pane of the DataMan Setup Tool (under **Communication Settings**).
- Scan the appropriate **Reader Configuration codes** (see **Reader Configuration Codes** available through the Windows **Start** menu or the Setup Tool **Help** menu).
- Send the appropriate **DMCC** (see **Command Reference** available through the Windows **Start** menu or the Setup Tool **Help** menu).

For more information on using the industrial protocols, read the **DataMan Communications and Programming Guide** available through the Windows **Start** menu or the Setup Tool **Help** menu.

Trigger Types

The DataMan 8600 trigger mode determines when the reader attempts to read a code. Use the DataMan Setup Tool or the appropriate reader configuration codes to change trigger types.

The following trigger types are supported:


- Presentation: The LED aimer is always on. When motion is detected in front of the reader, the reader will turn on and scan for a symbol. The reader relies on an internal timing mechanism to acquire images.
- Manual (default): The reader begins acquiring images when you press the trigger button on the reader, and continues acquiring images until a symbol is found and decoded or you release the button.

Note that while in Presentation mode, as the operator pulls the trigger, the reader switches to Manual mode until the device is re-docked into the base station. Setup Tool continues to display Presentation mode while in this state. To bring it back to standard Presentation mode, use one of the following options:

- Dock the device into the base station
- Switch to Manual trigger mode in Setup Tool, then switch back to Presentation mode
- Scan the Enter Presentation Reader Configuration Code

Field of View and Reading Distances

The following map shows the range of reading distances available for different code sizes and focus positions.

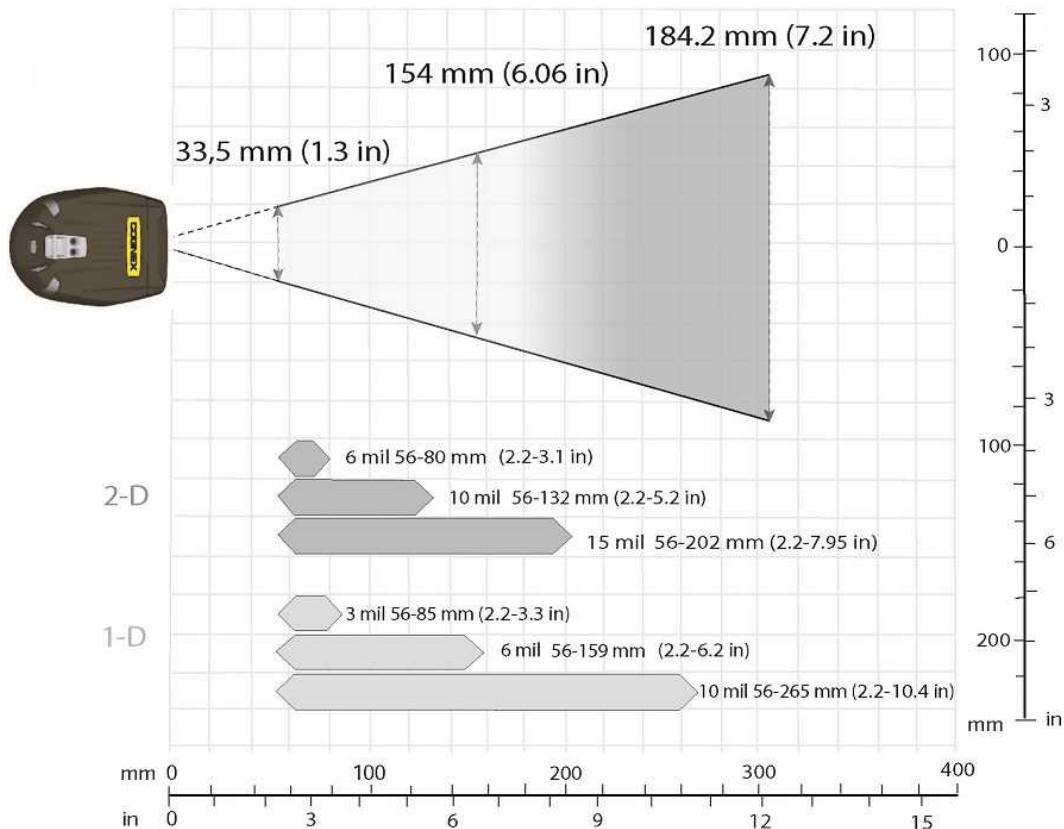


Note: The calibration distance is 143.0 mm from the nose of the lens, and the calibration tolerance is +/- 5 mm.

Cleaning/Maintenance

Cleaning the Reader Housing

To clean the outside of the reader housing, use a small amount of mild detergent cleaner or isopropyl alcohol on a cleaning cloth. Do not pour the cleaner directly onto the reader housing.


 **CAUTION:** Do not attempt to clean any DataMan product with harsh or corrosive solvents, including lye, methyl ethyl ketone (MEK) or gasoline.

Cleaning the Reader Lens Cover

To remove dust from the lens cover, use a pressurized air duster. The air must be free of oil, moisture or other contaminants that could remain on the lens cover. To clean the plastic window of the lens cover, use a small amount of isopropyl alcohol on a cleaning cloth. Do not scratch the plastic window. Do not pour the alcohol directly on the plastic window.

Compliance Information, Warnings and Notices

Laser Information

 **WARNING:** LASER LIGHT, DO NOT STARE INTO BEAM: CLASS 2 LASER PRODUCT FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE SERIOUS INJURY

CAUTION:

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not attempt to service or repair this product -- return it to Cognex for service.



- Do not permit anyone other than Cognex Corporation to service, repair, or adjust this product.
- Do not attempt to open or modify this device except as described in this document.
- Do not direct or reflect laser light toward people or reflective objects.
- Do not operate this device if it is damaged or if the covers or seals are missing or damaged.


This Laser Product is designated as Class 2 laser or when used in reduced intensity laser mode, as 1M, which is safe under all conditions of normal use.

| | |
|--------------------------------|--------------------|
| Wavelength | 650 nm |
| Laser Power for classification | < 1 mW |
| Beam Diameter | < 3 mm at aperture |
| Divergence | < 5 mrad |

For assistance, contact Cognex Corporation at <http://support.cognex.com>.

Regulations/Conformity

The DataMan 8600 has Regulatory Model 1AAT, the the wireless slide-in has Regulatory model 1ABB, and the Bluetooth slide-in has Regulatory model 1AAJ, and meets or exceeds the requirements of all applicable standards organizations for safe operation. However, as with any electrical equipment, the best way to ensure safe operation is to operate them according to the agency guidelines that follow. Please read these guidelines carefully before using your device.




 **Note:** For the most current CE declaration and regulatory conformity information, see the Cognex support site: cognex.com/support.

The following specifications apply to the corded DataMan 8600 readers:

| Regulator | Specification |
|--------------------|--|
| USA | FCC Part 15B, Class A FDA/CDRH Laser Notice No 50 |
| Canada | ICES-003 |
| European Community | EN55022, Class A EN60950 EN60825-1 EN61000-6-2 EN61000-6-4 |

The following specifications apply to the DataMan 8600 wireless readers:

| Regulator | Specification |
|--------------------|--|
| USA | FCC Part 15B, Class A FCC Part 15.247 FDA/CDRH Laser Notice No 50 |
| Canada | ICES-003 RSS 210 |
| European Community | For Bluetooth: EN301 489-1 / -17 EN55022 EN55024 For wifi: EN300 328 EN61000-6-2 |

| Safety and Regulatory | |
|---|---|
| Manufacturer | Cognex Corporation One Vision Drive Natick, MA 01760 USA |
|  | This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take immediate measures. This equipment complies with the essential requirements of the EU Directive 2014/30/EU. Declarations are available from your local representative. |
| FCC | FCC Part 15, Class A This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. |
| Canadian Compliance | This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada. |
| UL and cUL Statement  | UL and cUL listed: UL60950-1 1st ed. and CSA C22.2 No.60950-1 1st ed. |
| Brazilian Compliance |  <p>This 1AAJ Bluetooth slide-in with model number DMCM-BTM-00 has frequency range between 2.402 GHz and 2.480 GHz. Its Bluetooth specification is 2.1, 2.4 GHz with FHSS modulation, PCB antenna with 3dB peak antenna gain.</p> |
| Mexican Compliance | For Bluetooth: RCPCO1A15-0074 For wifi: RCPC01A15-1366 |
| Chinese Compliance | For Bluetooth: CMIIT ID: 2015DJ0236 For wifi: CMIIT ID: 2015DJ3460 |

Laser Safety Statement

WARNING: Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007. This device has been tested in accordance with IEC60825-1 3rd ed., and has been certified to be under the limits of a Class 2 Laser device.

For European Community Users

Cognex complies with Directive 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

This product has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment, if not properly disposed.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems for product disposal. Those systems will reuse or recycle most of the materials of the product you are disposing in a sound way.



The crossed out wheeled bin symbol informs you that the product should not be disposed of along with municipal waste and invites you to use the appropriate separate take-back systems for product disposal.

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You may also contact your supplier for more information on the environmental performance of this product.

Compliance Statements: DataMan Base Station




The DataMan Base Stations have the following Regulatory models respectively: DMA-IBASE-BT-XX has 1AAG, DMA-CBASE-01 has R00046, and they meet or exceed the requirements of all applicable standards organizations for safe operation. However, as with any electrical equipment, the best way to ensure safe operation is to operate them according to the agency guidelines that follow.

Note: For the most current CE declaration and regulatory conformity information, see the Cognex support site: cognex.com/support.

Please read these guidelines carefully before using your device.

| Regulator | Specification |
|--------------------|---|
| USA | FCC Part 15B, Class A FCC Part 15.247 |
| Canada | ICES-003 RSS 210 |
| European Community | EN301 489-1 / -17 EN300 328-2 EN60950 |

| Safety and Regulatory | |
|-----------------------|--|
| Manufacturer | Cognex Corporation One Vision Drive Natick, MA 01760 USA |

| Safety and Regulatory | |
|---|--|
| European Compliance  | This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take immediate measures. This equipment complies with the essential requirements of the EU Directive 2014/30/EU. Declarations are available from your local representative. DMA-IBASE-BT-XX: This equipment complies with the essential requirements of EU Directives 2014/30/EU and 2014/53/EU as applicable. Declarations are available from your local representative. DMA-IBASE-01 and DMA-CBASE-01: This equipment complies with the essential requirements of EU Directives 2014/30/EU and 2014/53/EU as applicable. Declarations are available from your local representative. |
| FCC Class A Compliance Statement  | This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications made to this equipment not expressly approved by Cognex may void the FCC authorization to operate this equipment. |
| Canadian Compliance | This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada. |
| UL and cUL Statement  | UL and cUL listed: UL60950-1 2nd ed. and CSA C22.2 No.60950-1 2nd ed. |
| Mexican Compliance | DMA-IBASE-BT-XX: RCPCO1A15-0073 DMA-IBASE-01: RCPCODM12-0655 |
| Chinese Compliance | DMA-IBASE-BT-XX: CMIIT ID: 2015DJ0237 DMA-IBASE-01: CMIIT ID: 2012DJ2857 |

For European Community Users

Cognex complies with Directive 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

This product has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment, if not properly disposed.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems for product disposal. Those systems will reuse or recycle most of the materials of the product you are disposing in a sound way.



The crossed out wheeled bin symbol informs you that the product should not be disposed of along with municipal waste and invites you to use the appropriate separate take-back systems for product disposal.

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You may also contact your supplier for more information on the environmental performance of this product.

中国大陆RoHS (Information for China RoHS Compliance)

根据中国大陆《电子信息产品污染控制管理办法》(也称为中国大陆RoHS), 以下部份列出了本产品中可能包含的有毒有害物质或元素的名称和含量。



Table of toxic and hazardous substances/elements and their content, as required by China's management methods for controlling pollution by electronic information products.

| Part Name 部件名称 | Hazardous Substances 有害物质 | | | | | |
|---|---------------------------|-------------------|-------------------|--------------------------------------|--|--|
| | Lead (Pb) 铅 | Mercury (Hg) 汞 | Cadmium (Cd) 镉 | Hexavalent Chromium (Cr (VI)) 六价铬 | Polybrominated biphenyls (PBB) 多溴联苯 | Polybrominated diphenyl ethers (PBDE) 多溴二苯醚 |
| Regulatory Model 1AAT Regulatory Model 1ABB Regulatory Model 1AAJ Regulatory Model R00043 Regulatory Model 1AAG Regulatory Model R00046 | X | O | O | O | O | O |
| <p>This table is prepared in accordance with the provisions of SJ/T 11364. 这个标签是根据SJ/T 11364 的规定准备的。</p> <p>O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB / T26572 - 2011. 表示本部件所有均质材料中含有的有害物质低于GB / T26572 - 2011 的限量要求。</p> <p>X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB / T26572 - 2011. 表示用于本部件的至少一种均质材料中所含的危害物质超过GB / T26572 - 2011 的限制要求。</p> | | | | | | |

Reader Control Codes



Reset Scanner to
Factory Defaults



Reboot
Scanner



USB Serial



USB Keyboard



Enable DHCP



USB Keyboard for
Base Station



Pair

Keyboard Language (Corded Readers Only)



US English



German



French



Spanish



Japanese

Precautions

⚠ WARNING: LASER LIGHT, DO NOT STARE INTO BEAM: CLASS 2 LASER PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE SERIOUS INJURY.

To reduce the risk of injury or equipment damage, observe the following precautions when you install the Cognex product:

- Route cables and wires away from high-current wiring or high-voltage power sources to reduce the risk of damage or malfunction from the following causes: over-voltage, line noise, electrostatic discharge (ESD), power surges, or other irregularities in the power supply.
- Changes or modifications not expressly approved by the party responsible for regulatory compliance could void the user's authority to operate the equipment.
- Ensure that the cable bend radius begins at least six inches from the connector. Cable shielding can be degraded or cables can be damaged or wear out faster if a service loop or bend radius is tighter than 10X the cable diameter.
- This device should be used in accordance with the instructions in this manual.
- All specifications are for reference purposes only and can change without notice.

